


Подключение турникета:

IN(1÷4)-CONNECTORS

Pin #	Signal Name
1	IN1+
2	IN1-

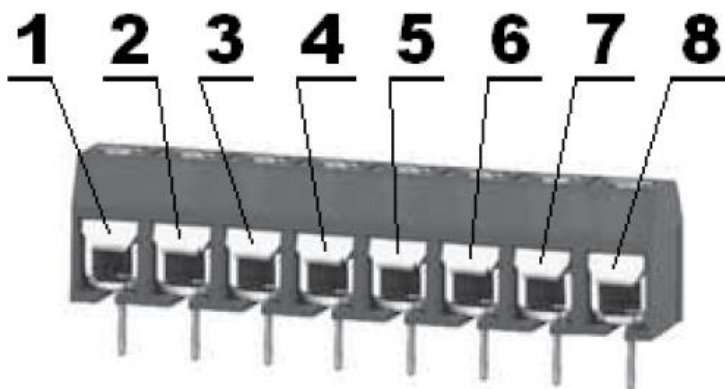

управление проходом турникета:
REL1

RELAYS:

Pin #	Signal Name
1	Normal Open
2	Common
3	Normal Close

